




4-Port CAT5e/6/7 USB 2.0 Extenders Quick Start Guide

Break the 16-foot (5-m) USB distance barrier. This transmitter/receiver pair extends USB up to 328 feet (100 meters) from a computer over CAT5e/6/7 cabling.

Before you get started, make sure that all the drivers required for your USB device(s) are installed.

1. Place the units where you want them and connect the CAT5e/6/7 cabling to the Link ports (RJ-45) on the local and remote units.

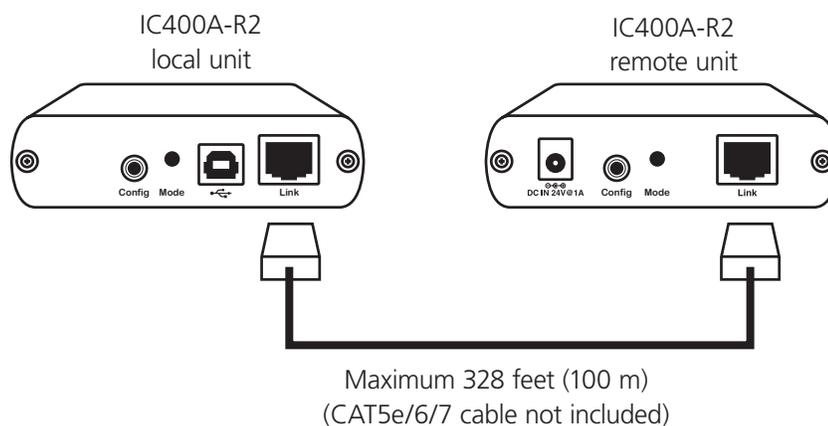

Contact Information


Order toll-free in the U.S. or for FREE 24/7 Technical Support: Call 877-877-BBOX (outside U.S. call 724-746-5500)
www.blackbox.com • info@blackbox.com

Trademarks Used in this Manual


Black Box and the Double Diamond logo are registered trademarks of BB Technologies, Inc.

Any other trademarks mentioned in this manual are acknowledged to be the property of the trademark owners


2. Connect the local unit to the computer.

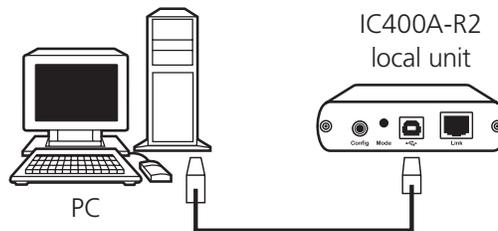

3. Connect the remote unit to the AC adapter.

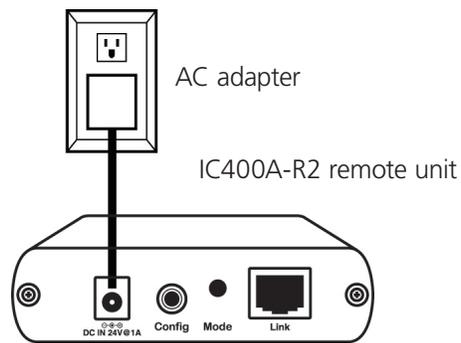

4. Attach the USB device(s) to the remote unit.

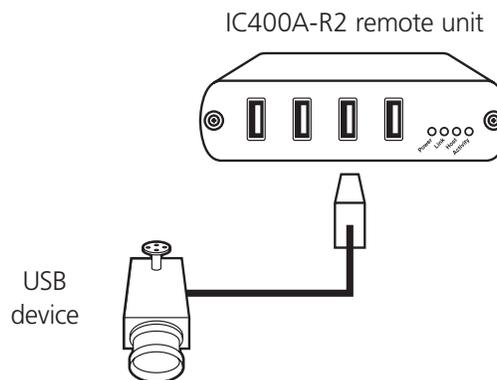

NOTE: If grounding the USB extenders is required, refer to the user manual on blackbox.com. To download the manual, enter IC400A-R2 in the search box, then click on IC400A-R2 in the product results page. Then click on the Support tab and select the IC400A-R2 user manual to download.

© Copyright 2016. All rights reserved.

FREE, live, 24/7 Tech Support is just 60 seconds away.
877-877-2269 | blackbox.com